

## Trademarks

CTS is a registered trademark of Connection Technology Systems Inc. Contents subject to revision without prior notice.

All other trademarks remain the property of their owners.

## Copyright Statement

Copyright © Connection Technology Systems Inc.

This publication may not be reproduced as a whole or in part, in any way whatsoever unless prior consent has been obtained from Connection Technology Systems Inc.

## FCC Warning

The SRC-5002SFP-MG converter has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These standards are designed to provide reasonable protection against harmful interference when these devices are operated in a commercial environment. These devices generate, use, and can radiate radio frequency energy and may cause harmful interference to radio communications unless installed in accordance with this User's Guide. Operation of these devices in a residential area is likely to cause harmful interference which will make the user responsible for the appropriate remedial action at his / her own expense.

## CE Mark Warning

These are Class A products. In a domestic environment these products may cause radio interference in which case the user will need to consider adequate preventative methods.

## 1. Overview

Thank you for purchasing CTS SRC-5002SFP-MG Media Converter. In this user's guide, "Media Converter" will be used as an alternative name for SRC-5002SFP-MG.

## Major Features:

- TP Auto-Negotiation
- MDI/MDIX Auto-Crossover
- 16K bytes Jumbo Frame
- Store and Forward switching mechanism
- 4K MAC address
- Link Alarm
- Alarm (Digital Output)
- Flow Control \*

\* Automatically enabled when the F/O port operates at 10G, and the copper port operates at 5G, 2.5G, 1G or 100M.


## 2. Checklist


The items listed below should be included in the package:

- Media Converter
- User's Guide
- 1 x Din-rail bracket (already locked on the media converter)
- 1 x Wall mounting kit

Please contact your sales representative for assistance immediately if any item is missing or damaged.

## 3. Installation
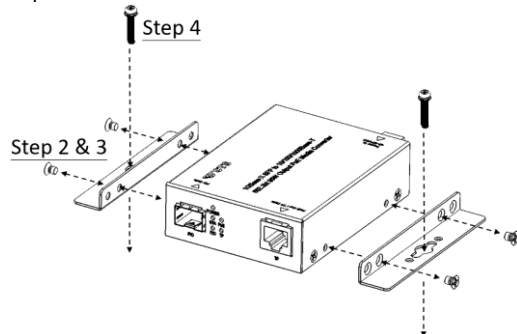
<b>1</b>	Set the DIP switch according to section four.
<b>2</b>	Insert the SFP/SFP+ transceiver into the SFP/SFP+ slot.
<b>3</b>	The picture guide below is for flat installation.
<p>Follow the picture guide to install the media converter flatly by wall mounting or Din-rail.</p> <p>*The following images use the SRC-3002SFP as an example.</p> <p>(1) Wall mounting</p> <ul style="list-style-type: none"> <li>-Step 1: Remove Din-rail bracket</li> <li>-Step 2: Remove 4 screws from housing</li> <li>-Step 3: Re-install 4 screws with wall mounting kit</li> <li>-Step 4: Mount the media converter on the wall</li> </ul>	
	
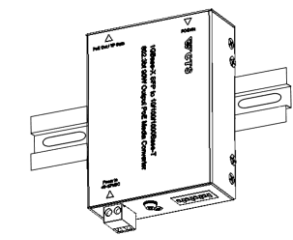
<b>3</b>	<p>(2) Din-rail</p>  <p><b>NOTE:</b> Besides the flat installation, we also provide accessories for slim installation, please contact our sales if needed.</p>
<b>4</b>	Attach fiber cable from the media converter to the fiber network. The fiber connector must be matched – <u>transmit socket to receive socket</u> .
<b>5</b>	Attach a UTP cable from the 100M/1G/2.5G/5G/10G BASE-T network to the RJ-45 port on the media converter.
<b>6</b>	Connect the power source to the media converter and check that the Power LED lights up. The TP Link/Act/Speed and F/O Link/Act/Speed LEDs will light up when all the cables are properly connected.
<p>Note:</p> <p>(1) The wire gauge for the terminal block should be 18 AWG or above.</p> <p>(2) The DC plug of the power adapter should be OD: 5.5 mm, ID: 2.1 mm, Length: 9.5 mm, and support a minimum output of 8W.</p>	

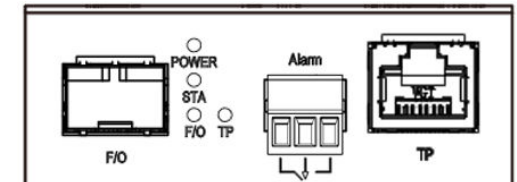


Figure 1. Front Panel of Media converter

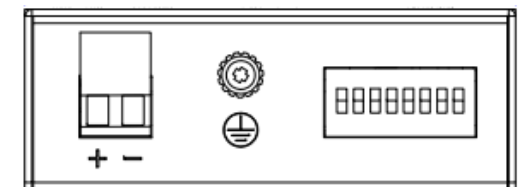


Figure 2. Rear Panel of Media converter

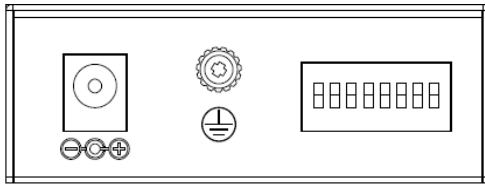


Figure 3. Rear Panel of Media Converter (DC jack version)

## 4. DIP SWITCH Setting

The default setting for all PIN is ON.

Pin NO.	Function	OFF / Down	ON / Up
1	Maximum RJ-45 Speed	Up to 2.5Gbps	Up to 10Gbps
2	F/O Mode	Force	Auto
3	Fiber Speed	1Gbps	10Gbps
4	Reserve	-	-
5	Link Alarm	Enabled	Disabled
6	F/O Fault Alarm	Enabled	Disabled
7	TP Fault Alarm	Enabled	Disabled
8	Reserve	-	-

### NOTE:

- Please power off the device first when you change DIP switch.
- Pin 2 can only be activated when Pin 3 is in the OFF position (1Gbps).
- If Pin 6 or 7 is set to off (enabled), an alarm will be triggered when the corresponding port has no connection.

## 5. LED Description

LED	Color	Function
Power	Green	Power is available.
Status	Green	Both TP and F/O link are established.
	Orange	TP or F/O link is not established.
TP Link/Act /Speed	Off	No link is established.
	Orange	<b>Lights up</b> when a 1Gbps/100Mbps link is established.
		<b>Blinks</b> when 1Gbps/100Mbps TP traffic is present.
	Blue	<b>Lights up</b> when a 10/5/2.5Gbps link is established.
<b>Blinks</b> when 10/5/2.5Gbps TP traffic is present.		
F/O Link/Act /Speed	Off	No link is established.
	Orange	<b>Lights up</b> when a 1Gbps link is established.
		<b>Blinks</b> when 1Gbps F/O traffic is present
Blue	<b>Lights up</b> when a 10Gbps link is established.	
		<b>Blinks</b> when 10Gbps F/O traffic is present.

## 6. Technical Specifications


<b>Standards</b>	IEEE 802.3u, 802.3ab, 802.3z, 802.3bz, 802.3an, 802.3ae, 802.3x
<b>Interface</b>	1 x 10/1G SFP+ Slot 1 x 10G/5G/2.5G/1G/100M RJ-45 connector
<b>LED</b>	Power, Status, TP Link/Act/Speed, F/O Link/Act/Speed
<b>Power Input</b>	12~57 VDC
<b>Power Consumption (Full-load)</b>	Device: < 8 watts (27.3 BTU/hr)
<b>Weight</b>	230 g
<b>Dimensions</b>	71 x 94 x 26mm (W x D x H)
<b>Temperature</b>	Operating: -20°C~60°C Storage: -30°C~70°C
<b>Humidity</b>	5%~90% RH, Non-Condensing
<b>Certification</b>	CE/FCC Class A
<b>Media</b>	TP: EIA/TIA-568 CAT 5e @ 100M, 1G, 2.5G CAT 6A @ 5G, 10G
	Fiber: 50/125 or 62.5/125µm multi-mode 9/125 or 10/125µm single-mode

**NOTE:** Specifications may change without prior notice. Please contact us for further reports and updates.

## 7. Alarm Relay Configuration

The 3-pin terminal block (alarm/digital output) located on the front panel is used to connect alarm devices.

①	Set the DIP switch PIN 6 and 7 according to section four.
②	Please refer to the image on the right and the instructions below to connect the wires to the terminal block based on the required normal status for your connected device. - <b>Normally Closed:</b> Connect to the left and the middle holes. - <b>Normally Open:</b> Connect to the right and the middle holes.

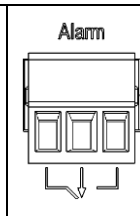

**NOTE:** Relay output capacity is 1A @ 24VDC

## Contact Information

Connection Technology Systems INC (CTS)  
18F-6, No.79, Sec.1, Xintai 5th Rd., Xizhi Dist.,  
New Taipei City 221, TAIWAN, R.O.C.  
TEL: +886 2 26989661 FAX: +886 2 26989662  
E-Mail: [info@ctsystem.com](mailto:info@ctsystem.com)



## SRC-5002SFP-MG

10/1GBase-X SFP to  
10/5/2.5/1G/100M Base-T RJ-45  
Rugged Media Converter

User's Guide

Version 1.1